


System Service Mode (Valet Mode)

System **Service Mode** will disable the remote starter. This will only effect the remote start portion of the system. The optional lock, unlock and trunk release features will still be operational. When the vehicle is to have any under hood or service work done, the system must be placed into **Service Mode**. This feature may also be used if a transmitter is lost, damaged or if the system malfunctions.

ENTERING SERVICE MODE


1. Turn the ignition key to the On position.
2. Press and hold the Program Button (Located on the antenna) for 5 seconds or until the siren chirps five times.

NOTE: The LEDs on the antenna will turn on solid to confirm Service Mode. If the  button is pressed while the system is in Service Mode the park lights will flash 3 times slowly.

EXITING SERVICE MODE

1. Turn the ignition key to the On position.
2. Press and hold the Program Button (Located on the antenna) for 5 seconds or until the siren chirps two times.

NOTE: The LEDs on the Antenna will turn off and the remote starter functions will be re-enabled.

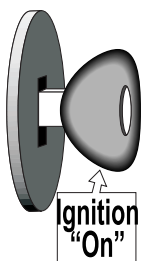

ATTENTION:

TO AVOID SERIOUS INJURY, this remote start system must be set into **Service Mode** before any under hood servicing is started. **Service Mode** will prevent the vehicle from starting while the vehicle is being serviced. It is the sole responsibility of the vehicle's owner to place the system into **Service Mode**. The manufacture accepts no responsibility for accidental starting of the vehicle while the vehicle is being serviced.